 
 




No.	Desktop Frame	No.	Keyboard Tray	No.	Cable Ties
A	 x1	B	 x1	C	 x4
No.	Cable Management	No.	Power Adapter	No.	Power Cable
D	 x1	E		F	

TOOLS



Technical Data


Desktop size:

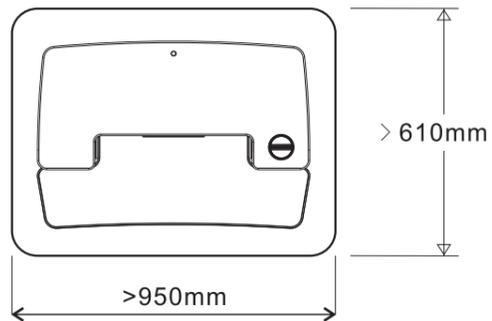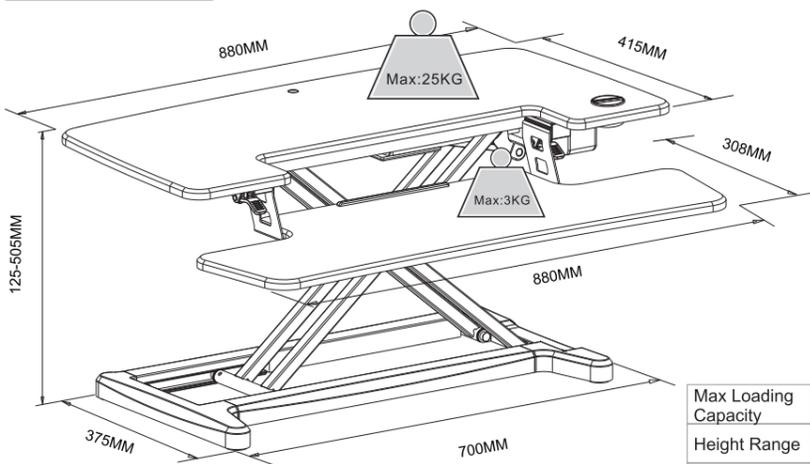

**WARNING** Do not exceed the maximum load capacity

Max Loading Capacity	25KG	Input Voltage	100-240V
Height Range	125-505mm(±7)	Max Speed	22mm/s
Frequency	10%(Continuous operation for 2mins at most after pause for 18mins)	Temperature	0-40°C

STEP 1

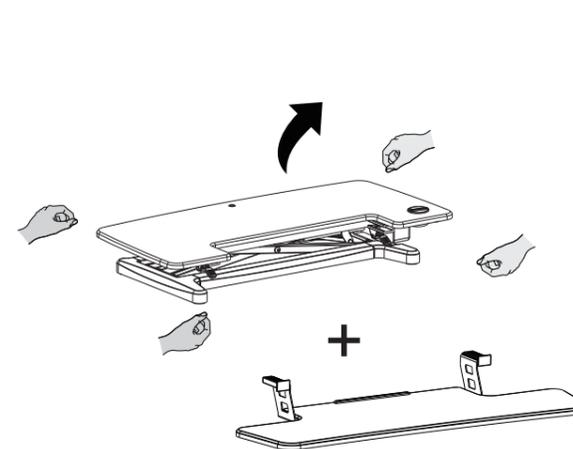

Please unpack the carton, take out the product and place it on the table.



Please make sure that the size of the desktop is in line with the requirements, otherwise it will cause property damage or personal injury.

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of Low power consumption mode condition of electrical and electronic household equipment.


The technical information of Low power consumption mode condition:

Mode	Power consumption (Watts)	The period(Minutes)
Low power consumption mode condition	≤0.5W	1min


The website URL of the English - version electronic instruction manual: [www.backcs.co.uk/desk-instructions](http://www.backcs.co.uk/desk-instructions)

Power Supply	
Manufacturer: Shenzhen Green Power Electronic Technology Co.,Ltd.	
Model: GS04501900150M2	Average Active Efficiency: ≥88.62%
Rated Input: 100-240VAC, 50/60Hz	Efficiency at Low Load (10%): 85.63%
Rated Output: 19V DC, 1.5A	No-load Power Consumption: <0.09 W


## STEP 2

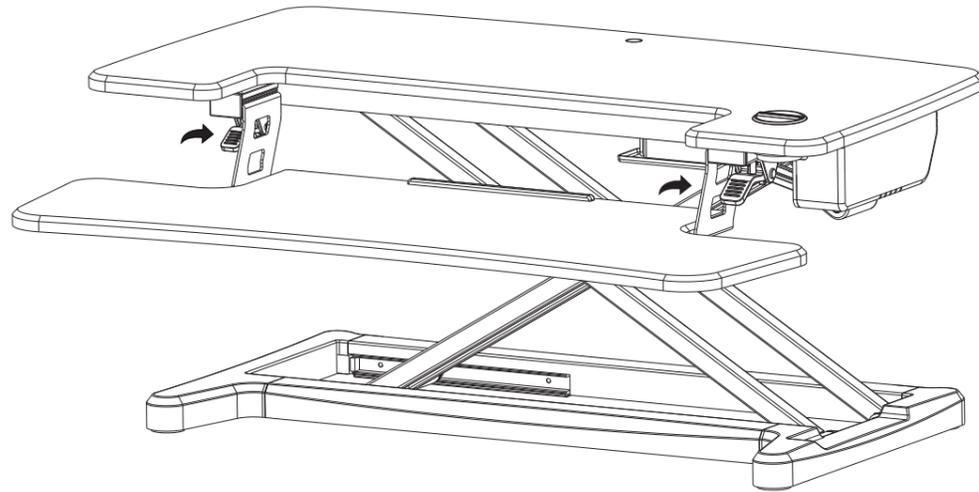


Install the attachment plate to the corresponding slot and tighten the wrench.

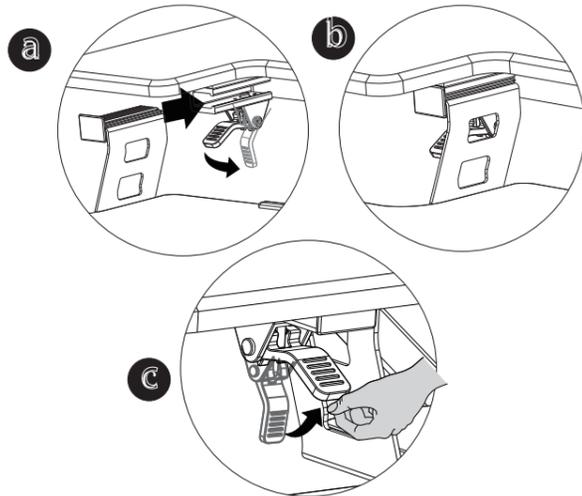

When removing the keyboard tray, please open the wrench, and then take out the keyboard tray.

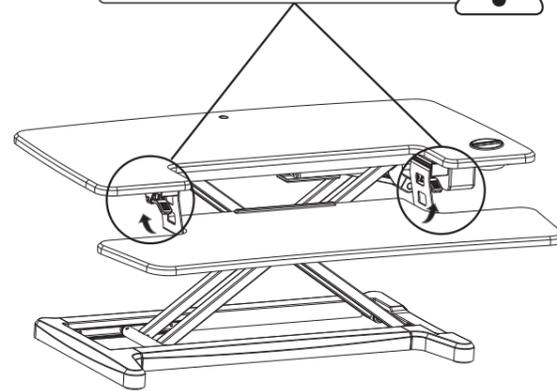

## STEP 3

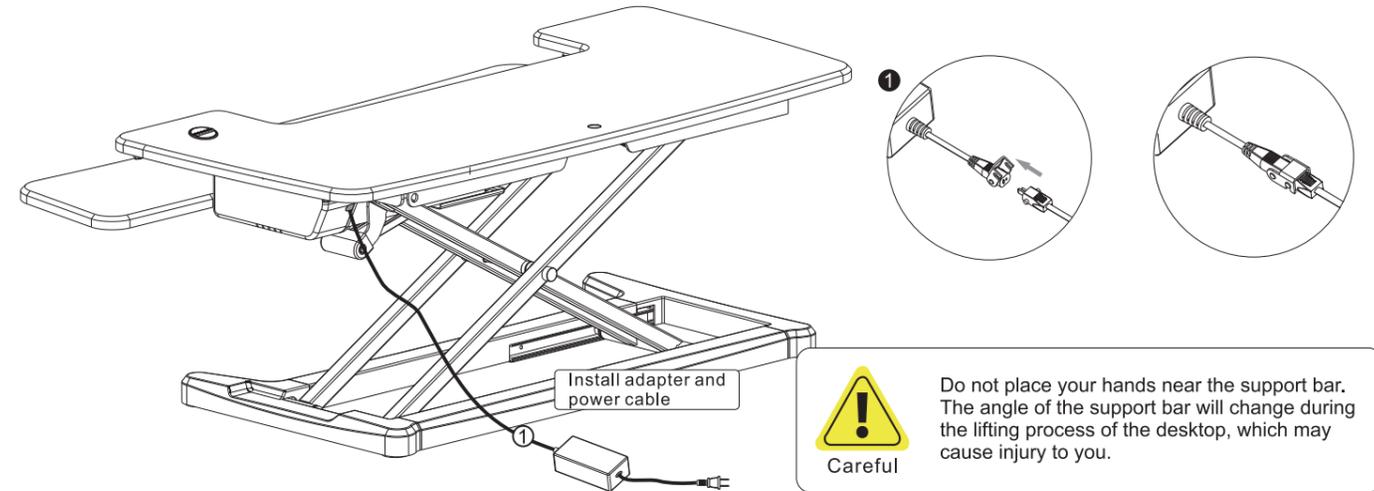


Install adapter and power cable




Do not place your hands near the support bar. The angle of the support bar will change during the lifting process of the desktop, which may cause injury to you.

Careful

## STEP 4

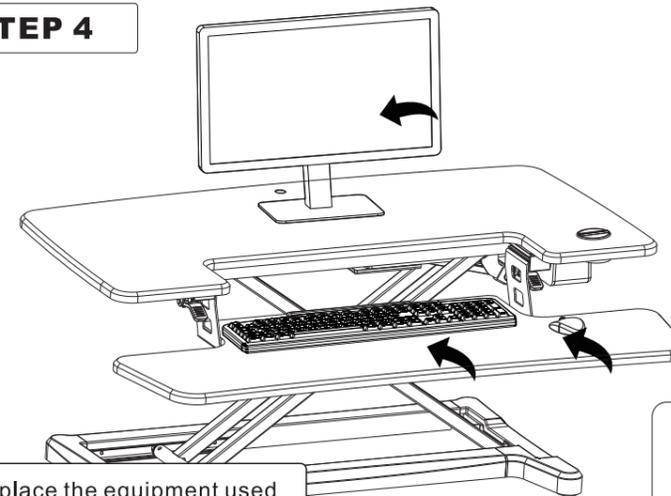


Please place the equipment used on the surface.

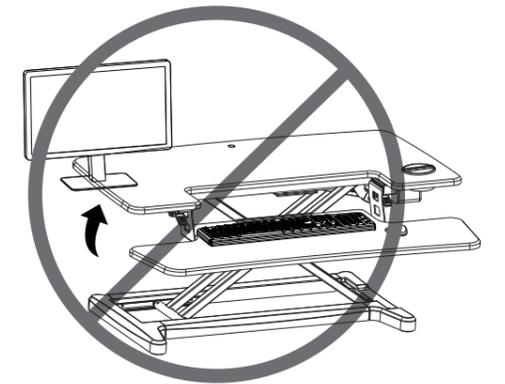

Please ensure that all installed equipment is completely on the table and do not place them beyond the edge of the table, otherwise property damage or personal injury may result.

Careful

## STEP 5

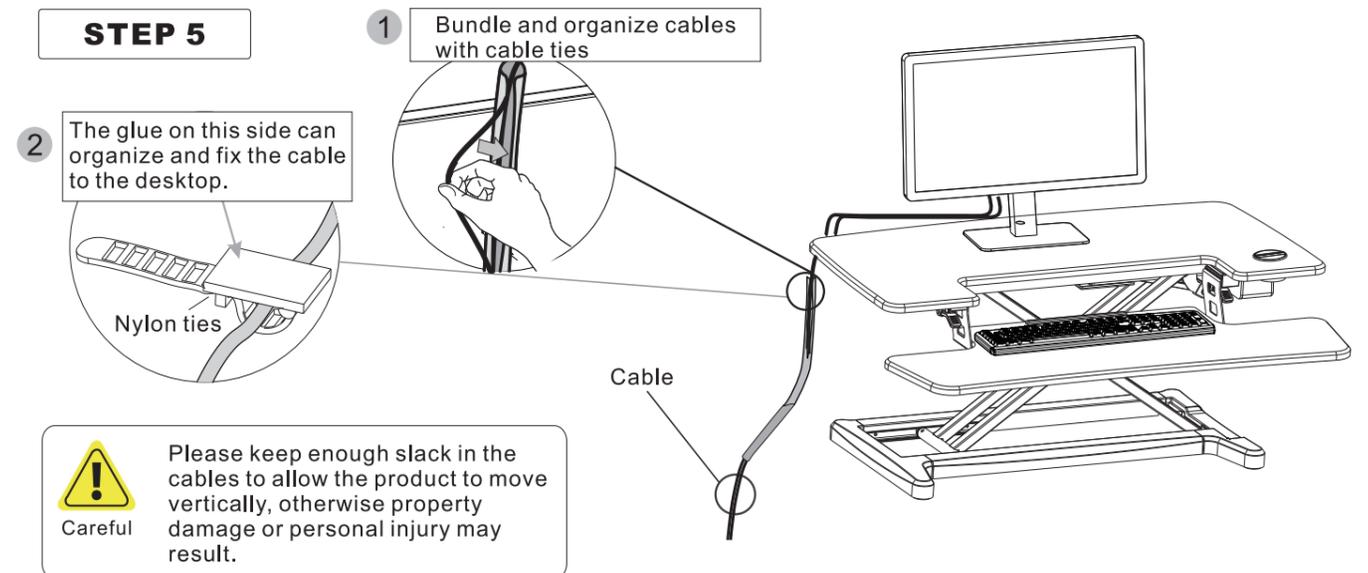

1 Bundle and organize cables with cable ties

2 The glue on this side can organize and fix the cable to the desktop.

Nylon ties

Cable




Careful

Please keep enough slack in the cables to allow the product to move vertically, otherwise property damage or personal injury may result.

## How to use handset

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards

Button

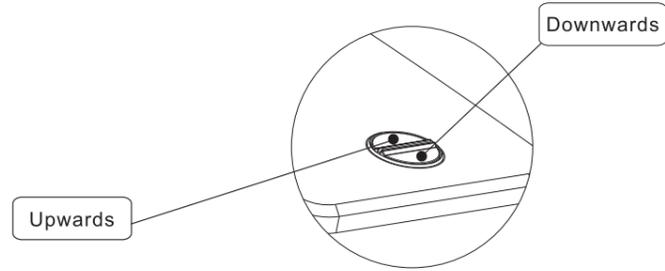

## Operation

**Button Lift Function:**  
Press the "▲" or "▼" button to adjust the height of the desk.



## Attention

1. Power supply: AC100V-240V, 50/60Hz
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
11. Keep the original package of the equipment if necessary in case of the future use in transportation.

## Common fault treatment


The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault Phenomenon	Method
No response while long pressing down/up button after connected with power supply	<ol style="list-style-type: none"> <li>1. Check if all the cables be connected well</li> <li>2. Contact your supplier or dealer</li> </ol>
Downward sliding	<ol style="list-style-type: none"> <li>1. Check if overloaded, Max loading :25kg</li> <li>2. Contact your supplier or dealer</li> </ol>
Overwork (Duty cycle: Max 2min on / 18min off)	<ol style="list-style-type: none"> <li>1. Restart after suspend for 30mins</li> <li>2. Contact your supplier or dealer</li> </ol>

## Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

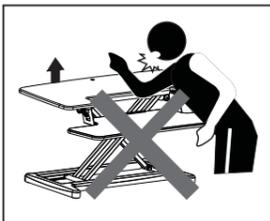

Please first adjust it to the highest, then remove equipment to avoid harm or damage.



Please move it by two persons, or parts may collide and cause damage.