



STEP 1

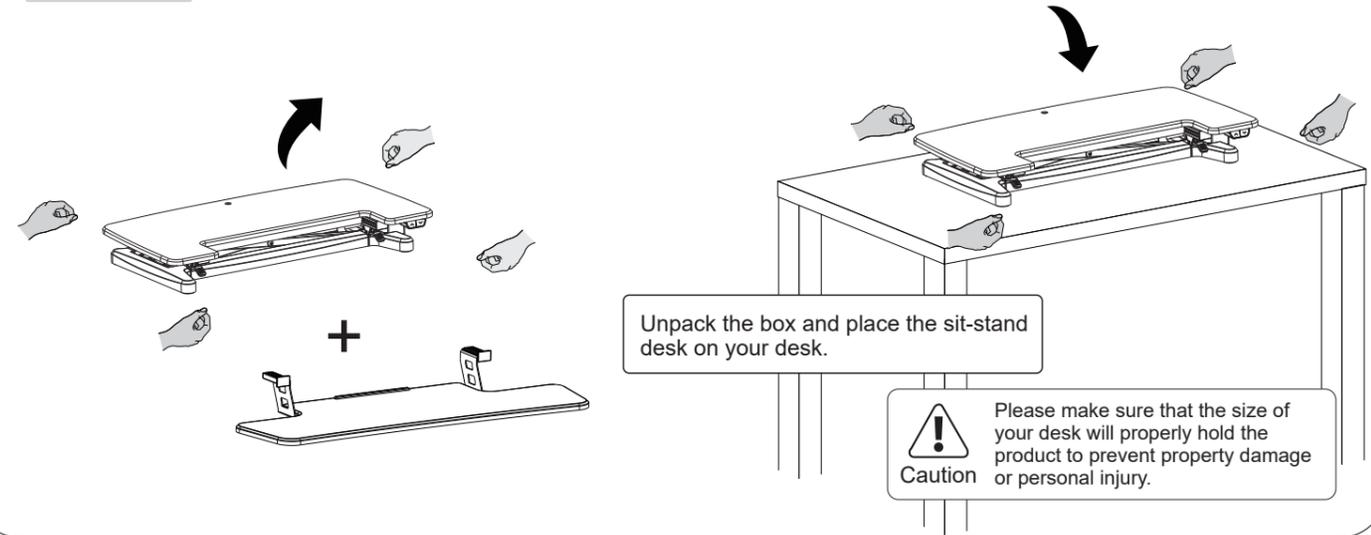


Technical Data



Table cover size:

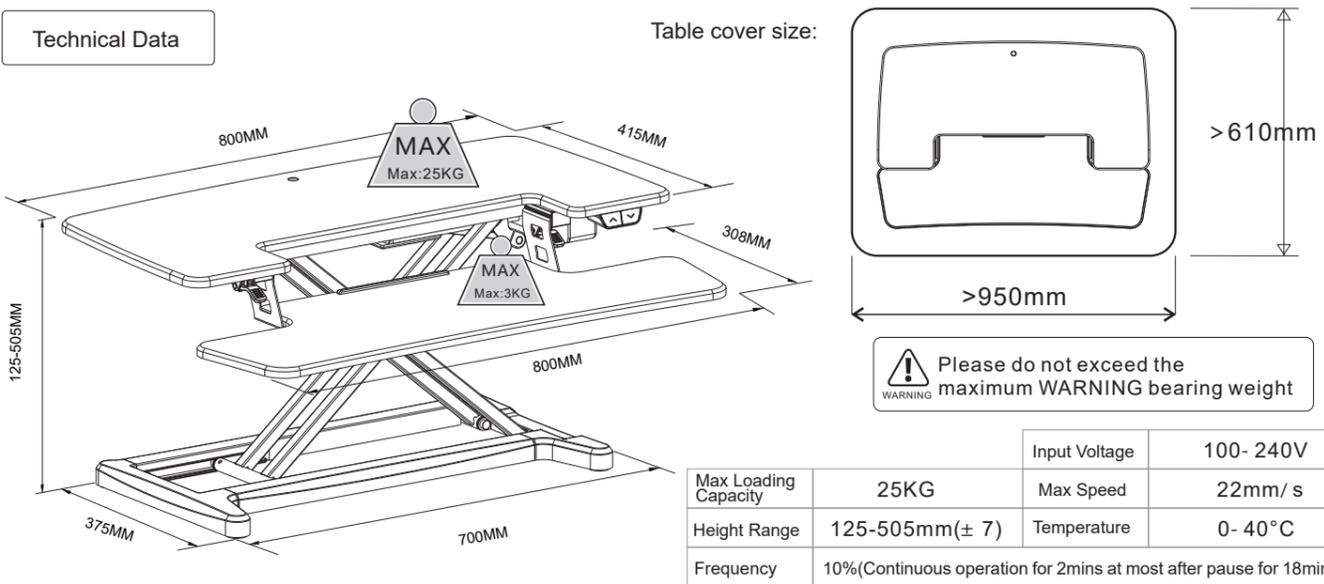


STEP 2

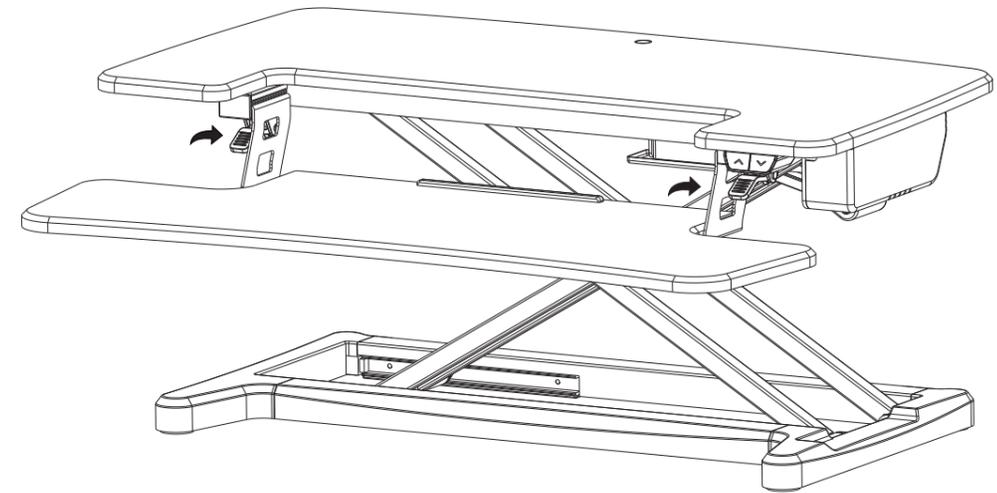



Accessory Package List

  No.	Workstation	No.	Keyboard Tray	No.	Cable Ties
A	 x1	B	 x1	C	 x4
No.	Cable Management	No.	Power Adapter	No.	Power Cord
D	 x1	E		F	


Connect the keyboard tray to the desktop plate.
a. Unlock the handle grips on both sides then attach the keyboard tray as shown in the diagram.
b. Lock the handles down to finish assembly.

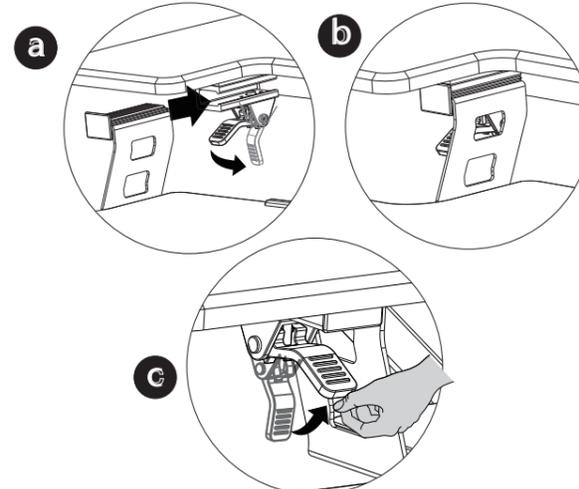

 
Remove the keyboard tray
Please open the handle grips on both sides, then take out the keyboard tray.

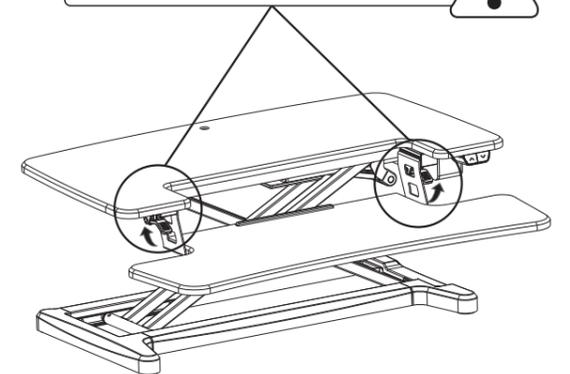

STEP 3

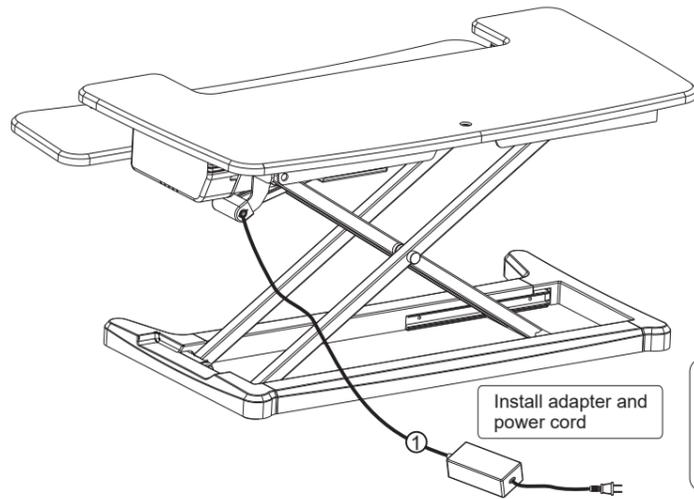


Install adapter and power cord

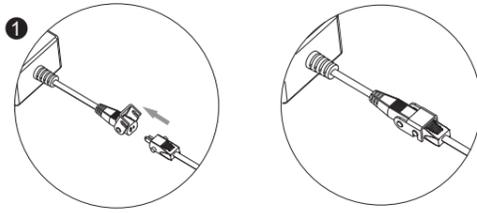


Do not place your hands near the strut during adjustments. The angle of the strut joints will change during the adjustment of the desktop height and it may hurt you.

STEP 4

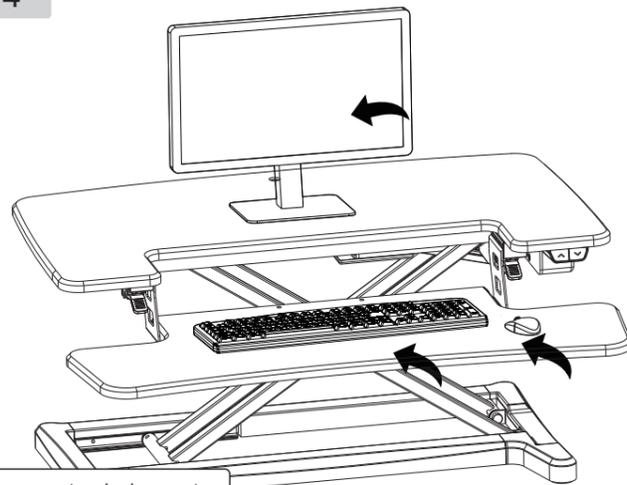

Place your computer devices onto the worktop of the sit-stand desk.

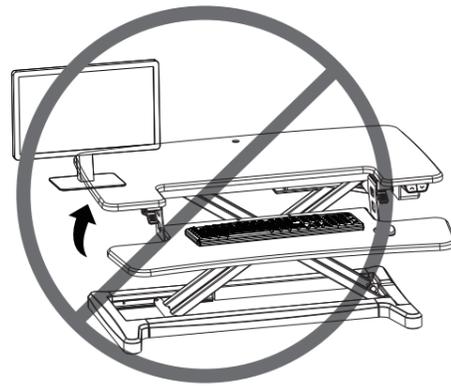


Please make sure all the devices are stably placed on the desktop. Do not exceed the edge of the desktop to prevent property damage or personal injury.

STEP 5

1 Manage the cables using cable sleeve.


2

Manage the cables using the cable ties. They can be attached to the surface of the desk.

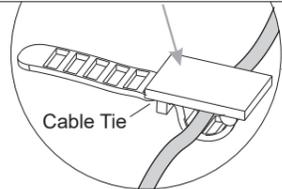

Cable Tie

Cable

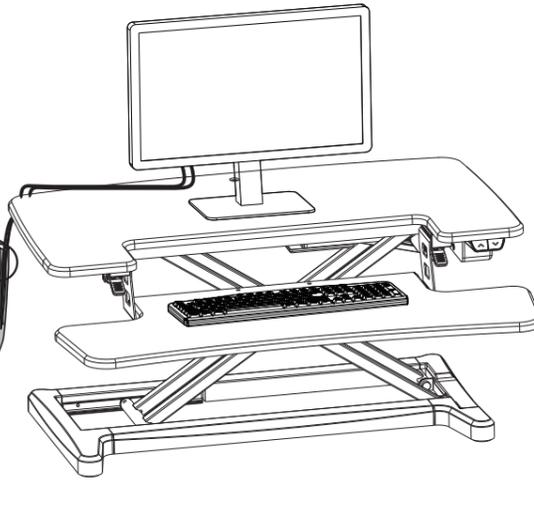


Do not tie the cables too tight. Allow the devices to move vertically to prevent property damage or personal injury.

How to use handswitch

●	“▲”	UP button, used to lift the desk surface
●	“▼”	DOWN button, used to lower the desk surface

Button

DOWN Button

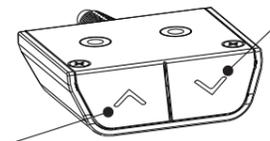

UP Button



Attention

1. Power supply: AC100 - 240V, frequency 50HZ/60HZ;
2. Working environment: 0-40
3. Before cleaning, you have to unplug the power plug. Clean with a slightly damp cloth to wipe the surface dust. Keep all electrical components away from liquids. Do not damage the connection line and keep the plug tight.
4. Inside the control box, there are electronic components, metal parts, plastic parts, wires and so on. They should be disposed in accordance with the local laws and regulations. They cannot be disposed as household waste.
5. Before using the product, please make sure the product has been installed correctly.
6. Before starting use the product, please read the instruction and get the knowledge of all the functions and settings of the product.
7. Keep Children away from electric height-adjustable desks, control units and handsets. Manufacturer is not responsible of any damages that result from children's unpredictable behaviour.
8. Slight noise causes from the structure of the multi wedge belt or brake system will not impact the use of the product.
9. Do not use of corrosive or abrasive materials to clean the product. Make sure that the use of detergent does no harm to the environment.
10. Please make sure that there is no source of risk in your operating environment. For example, do not left around your tools. And always be careful to deal with packaging materials, in order to avoid any kinds of possible danger. Potential choking risk exists when children play with plastic bags!
11. If necessary, retain the original package for future transportation.
12. Common troubleshooting: the following tips will help you detect and eliminate common failures and errors. If one of the failures you have encountered is not listed in the table below, please contact the seller or the manufacturer. All these failures or misoperation can only be investigated and corrected by the manufacturer or specially trained personnel.

Common fault treatment


The list is used for checking and solving common faults and errors. Please contact the manufacturer if the problem your met is not on the list below. Only trained staff are allowed to check and solve the problems.

Faults	Solution
Keypad does not work after turn on the power	1. Check the cable connection status 2. Contact the distributor or the manufacturer.
Cannot lift	1. Check if the loading weighs more than 25 kg. 2. Contact the distributor or the manufacturer.
Overworked beyond duty cycle: Max 4min on/13 min off	1. Recommend stop working for 30 minutes. 2. Contact the distributor or the manufacturer.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

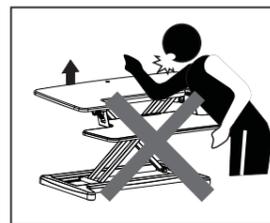

Please first adjust it to the highest, then remove equipment to avoid harm or damage.



Please move it by two persons, or parts may collide and cause damage.